

The logo for FingerTec is located in the upper left quadrant of the page. It features the word "FINGERTEC" in a bold, sans-serif font, with a red circular icon containing a white fingerprint symbol positioned between the 'E' and 'R'. The background of the top half of the page is a light blue gradient with a faint world map and a fingerprint pattern.

FINGERTEC.


HARDWARE

RESET MASTER PASSWORD OF KEYLOCK 6600 TO FACTORY DEFAULT

SUGGESTIONS & SOLUTIONS FOR HARDWARE

Step 1

Remove the the cover of the user side without keypad and scanner.

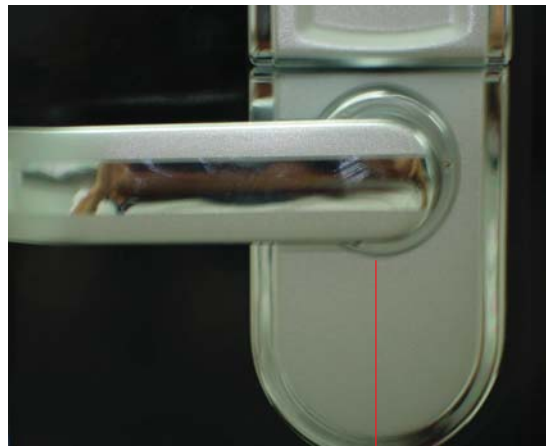

Remove this ring by turning it
in anti-clock wise direction.



Metal ring

Plastic
washer

Step 2

Remove the metal cover.



Remove the metal back cover.

Step 3


Removing any one dry cell (battery).



Battery removed

Step 4

Reset the unit.

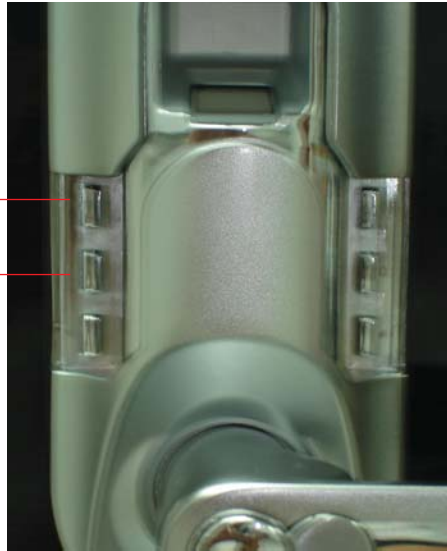

Press the button 1 and 2 simultaneously. Meanwhile, install the battery back to its original position. Note: You must continue to press the keypad button 1 and 2 while you are installing the battery.

You should hear a long "beep" sound to indicate the unit is reset to its factory master password, 11111111.

Step 5

You may now re-assemble the unit and should test the function of the master password.