



## FING@RTEC. REAL TIME CLOCKING DISPLAY

You can view all clock in or clock out data by clicking on the "Online" button. For the current TCMS V2.1.0, there is a scroll bar that controls the transfer speed from a reader to TCMS V2. The speed of a user ranging means stop and 10 means the fastest speed available.

## Step $3 \cdot D$ isplay the photo.

нау колик эку окулят корураання конниктину.											Local 22/03/2012 15:13:1		
p	No Download	ID	Description	Open	Sync	Event	Clear	Time	User ID	Name	Time	Transaction	
		1	Main Door					22/03/2012 15:12:42					
-							_						
+							-				-		
1							-				-		
								İ					
				_			_						
-							_				_		
+							-				-		
1							-				-		
-							_				_		
+							-		-		_		
+							-		-				
				-			-				-		

Figure 1.3

You may view the photo of a user who has clocked in or out. Click the "Show Photo" button and the list will change as shown below.

22											203/201	03/2012 15:13:51		
kip .	No Download	D	Description	Open	Sync	Event	Clear	Timé	User D	Name	-	Time	Transacti	
3		1	Main Door					// ::			X			
_				-			_		++					
				_										



You may adjust the size of the photo by clicking on the "+" or "-" sign in the "Hide photo" button. You must make sure that you have already input the photos of the users into the database before you can view them.

Copyright © 2012 by FingerTec Worldwide Ltd. All rights reserved. **LAST UPDATE 09 JULY 2012**